



Cat. No. 15-1171

## Cable Bidirectional Amplifier

Your RadioShack Cable Bidirectional Amplifier is designed for use with a drop distribution cable TV (CATV) system that requires bidirectional transmission in the interactive network. It minimizes signal loss for long cable runs and is suitable for running a Pay Per View signal and an Internet signal. The amplifier's high gain amplifies a weak signal to produce a good picture.

## FEATURES

**54–1,000 MHz Forward Path and 5–40 MHz Reverse Path** — this frequency range covers the 300–450 MHz Hyper-Band and provides excellent amplification for the forward path of a drop CATV system.

**FR-4 Glass Fiber PCB and Sophisticated SMT Technology** — provide reliable and excellent performance.

**High Stability Zinc Alloy Die-Cast Housing** — ensures freedom from RFI (radio-frequency interference) and heat-sinking problems.

**Important:** This amplifier is intended for indoor use only.

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.




This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

**Note to the CATV System Installer:** This reminder is provided to call the CATV system installer's attention to Section 820–40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of

the building, as close to the point of cable entry as practical.

## CONNECTIONS

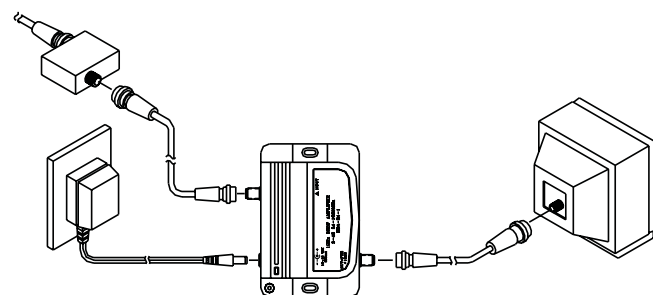

**Note:** Use only coaxial cable (not supplied) to make the connections. Your local RadioShack store carries suitable cable.

Connect the CATV's drop cable to the amplifier's **INPUT** terminal.

Connect the amplifier's **OUT + 15 dB** terminal to the 75 ohm input terminal of your TV, VCR, or dwelling network.

You can power the amplifier using the supplied 12V, 200 mA AC adapter.

### Cautions:



You must use a Class 2 power source that supplies 12V DC and delivers at least 200 mA. Its center tip must be set to positive and its plug must fit the amplifier's **12–16 VDC 200mA** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the amplifier or the adapter.

- Always connect the AC adapter to the amplifier before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the amplifier.

Connect the supplied AC adapter's barrel plug to the amplifier's **12–16 VDC 200mA** jack, then plug the AC adapter into a standard AC outlet. The power on indicator lights.

SPECIFICATIONS

Frequency Range .....	54–1,000 MHz (Forward Path) 5–40 MHz (Return Path)
Gain .....	15 dB Typical (Forward Path)
Insertion Loss .....	1.6 dB Maximum (Return Path)
Power Source .....	12–16V DC 200 mA AC Adapter
DC Current .....	130 mA Maximum
Impedance .....	75 Ohms
Housing Material .....	Zinc Die-Casting with Nickel-Plated Finish
Connector .....	IN/OUT: “F” Female DC IN: DC Power Jack for Plug
Weight .....	1 lb 5 oz (590 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or ex- clusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. Ra- dioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ra- dioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow in- structions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a Ra- dioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

08A99

Printed in Taiwan